

**ENERGIZER CHCFC**

**Battery Charger**



Dimensions (mm)  
140.00 x 104.00 x 64.00



**Features:**

1. Charges multiple combinations of AAA, AA, C, D, or 9V NiMH batteries - up to 8 batteries total.
2. Retractable charging bay for compact storage.
3. Four 2-color LED's indicate charge status on 4 independent charger bays.
4. Reverse polarity safety protection.
5. Alkaline, Lithium and bad cell detection through "Smart Charging" technology.
5. 3-step charging sequence: Main, Top-off, Trickle.

**Product Detail:**

**Designation:** Compact Family Charger

**Color:** Gun Metal Gray

**Charge Capability:** "AA" Up to 8 Batteries in Pairs  
 "AAA" Up to 8 Batteries in Pairs  
 "C/D" 1 to 4 Batteries  
 "9V" 1 or 2 Batteries

**Charging Current:** "AA" 525 mA  
 "AAA" 197 mA  
 "C/D" 525 mA  
 "9V" 40 mA

**Trickle Charge:** 80 mA Pulse (10% Duty Cycle)

**Charging Time:** 5-6 hours

**Typical Weight:** 400 grams (14 oz.)

**Dimensions (mm):** 140.00 x 104.00 x 64.00

**Charging Instructions:**

1. Slide out the battery compartment and set the battery holder to the appropriate setting.
2. Install the batteries in the chamber as indicated by the polarity symbols (+ and -) marked inside. When charging two AA or AAA batteries, use the two left or two right chambers. (unit charges AA and AAA batteries in pairs)
3. Plug the charger into a standard AC outlet. The charge status indicator will operate as follows:
  - a. When normal charging has started, the LED Charge Indicator will appear as shown in fig. 1.
  - b. As the battery is charged, the LED Charge Indicator will begin to change its display. When the cycle reaches approx. 50% the display will appear as shown in fig. 2.
  - c. When the charge cycle is complete, the display will appear as shown in fig. 3.
  - d. At this time, the batteries may be removed from the charger for use. Optionally, they may be left in the charger and the charger will continue to charge the battery in a "Top-off" mode that allows additional charge to be stored.
  - e. Top-off charging takes approx. 120 minutes and is useful to pack all the energy possible into a given battery.
  - f. If a problem is detected by the charger, a red LED will flash as shown in fig. 4. This indicates the battery will not be charged.
4. All of the LED Charge Indicator lights will be green when batteries are finished charging. Unplug the charger from the outlet and remove the batteries from the charger.



Figure-1 (Green)



Figure-2 (Green)



Figure-3 (Green)



Figure-4 (Red)

**Important Safety Instructions:**

1. For indoor use only. Do not expose charger to rain, snow, or excessive moisture.
2. Never use an extension cord or any attachment not recommended by Energizer®. May result in a risk of fire or electric shock.
3. Do not operate the charger if it has been subjected to shock.
4. Do not disassemble the charger. Incorrect reassembly may result in shock or fire.
5. Always unplug the charger before attempting maintenance or cleaning.
6. Never alter the plug provided. Improper connection can result in shock or fire.
7. This charger is not intended for use by young children or infirm persons without supervision.
8. Never use as a power source.



This data sheet contains information specific to battery chargers manufactured at the time of its publication.

©Energizer Holdings, Inc. - Contents herein do not constitute a warranty.