

**ENERGIZER CH1HR**

**Battery Charger**



Dimensions (mm)  
124.00 x 80.00 x 28.00

**Features:**

1. LED monitoring lights.
2. "Smart Charger" Individually monitors cell condition and terminates charging current when charged.
3. Charges NiMH batteries in approximately one hour.
4. Designed to charge the following NiMH battery sizes\*:
  - AA (NH15) 1 to 4 batteries at a time
  - AAA (NH12) 1 to 4 batteries at a time

\*Will charge 1, 2, 3, or 4 AA or AAA NiMH batteries.

**Product Detail:**

**Designation:** Hi-Energy Battery Charger

**Color:** Silver

**Charge Capability:** "AA" One to Four Batteries  
"AAA" One to Four Batteries

**Charging Current:** "AA" 1800 mA  
"AAA" 800 mA

**Trickle Charge:** 45-50 mA

**Charging Time:** Approximately 1 hour

**Typical Weight:** 119 grams (4.2 oz.)

**Dimensions (mm):** 124.00 x 80.00 x 28.00

**Charging Instructions:**

1. Raise positive holder tabs to allow charger to accept AA size NiMH batteries or lower tabs to accept AAA size NiMH batteries.
2. Plug the DC output plug of the adapter into the DC input jack of the charger.
3. Plug the adapter into a standard AC outlet and then the green LED should light.
4. Place 1 to 4 batteries into the battery compartment according to the polarity symbols (+ and -) marked inside each bay.
5. The red LED indicator turns off, when the battery in that channel is fully charged.
6. It is normal for the batteries to be warm while charging.
7. Unplug the charger from the outlet and remove batteries.

**NOTE:** Each channel has its own red LED indicator that lights when the battery in that channel is charging.

**NOTE:** Charger and batteries may be left plugged into outlet to maintain charge.

**NOTE:** For best performance, charge the batteries between 59°F and 77°F (15°C and 25°C). If the area is to warm, the batteries will not be fully charged. If the area is to cold, the batteries will lose their ability to charge.

**Important Safety Instructions:**

1. To reduce the risk of injury, charge only rechargeable NiMH batteries with the charger. Other types of batteries might burst, causing personal injury or damage to your charger.
2. Do not charge batteries with different capacities at the same time.
3. For indoor use only. Do not expose charger to rain, snow, or excessive moisture.
4. Never use an extension cord or any attachment not recommended by Energizer®. May result in a risk of fire or electric shock.
5. Do not operate the charger if it has been subjected to shock or damage.
6. Do not disassemble the charger. Incorrect reassembly may result in shock or fire.
7. Always unplug the charger before attempting maintenance or cleaning.
8. Never alter the plug provided. Improper connection can result in shock or fire.
9. This charger is not intended for use by young children or infirm persons without supervision.
10. Never use as a power source.

**Important Notice**

This data sheet contains information specific to battery chargers manufactured at the time of its publication.

©Energizer Holdings, Inc. - Contents herein do not constitute a warranty.