



CH4AA

HOW THEY WORK

- Plug in the Audio Power Pack or Gaming Power Pack for automatic power with 4 AA Energizer® e2® Lithium batteries

PERFORMANCE

- Patented integrated power management technology that optimizes power transfer from the Power Pack to portable MP3 player or handheld electronic games

BENEFITS

- Reusable, lightweight, durable, convenient, easy to use

Before Using Your Charger:

Please read all instructions and cautionary markings on the charger, batteries, and device.



Product Detail:

- Designation:** Audio and Gaming Power Pack
- Color:** Gun metal gray
- Charging Capability:** iPod, iPod mini, iPod nano
Gameboy DS, SP
Playstation Portable
- Input Voltage:** 4 x AA battery (6.0V nominal)
- Output Voltage:** 10V max (tip dependent)
- Output Power:** 8W max
- Charging Current:** Up to 800 mA
- Operating Temp:** 0°C to 70°C
- Storage Temp:** 0°C to 70°C
- Startup Mechanism:** Automatic when connected to device
- Shutoff Mechanism:** Product must be turned off
- Charging Indicator:** Blue Flashing LED
- Weight (charger):** 76.5 grams (2.7 oz.) w/o batteries or cable
- Dimensions (mm):** 15 x 75 x 60 (H x L x W)

INSTRUCTIONS

1. Press and slide open bottom unit cover in direction of arrow to gain access to the battery cavity area.
2. Locate battery diagrams on inside body of charger and insert batteries as indicated by the battery diagrams.
3. Align bottom unit cover and reattach to charger unit.
4. Connect device specific tip to the cable of the charger unit.
5. Connect your device to the device specific tip.
6. Move the switch at bottom of charger unit to "On"
7. Blue LED power on indicator above the Energizer logo will light. If the power on indicator does not light, change the batteries.
8. Your device should indicate that it is charging.
9. Your device will indicate when charging is complete.
10. Always turn off and disconnect the charger when charging is complete or batteries in the charger are depleted.
11. Never leave the charger connected to devices overnight.
12. To stop charging, move the switch at the bottom to "Off". Power on indicator will go off.

Important Notice

This datasheet contains information specific to products manufactured at the time of its publication.

©Energizer Holdings, Inc.

Contents herein do not constitute a warranty.

