


ENERGIZER CHF8



Dimensions (mm)
12.9 x 13.2 x 8.6 (H x L x W)

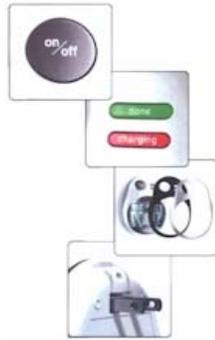

Features:

1. One-touch safety on/off switch.
2. Large, easy to understand charge status indicator lights.
3. Interchangeable face plates to match kitchen decor.
4. Fold-away plug for easy storage.
5. Charges up to 4 AA or AAA NiMH batteries at a time.
6. LED charge indicators.
7. Reverse polarity protection protects the charger and batteries against damage from incorrectly installed batteries.
8. Automatic timer shut-off turns off the charger to prevent overcharging AA or AAA batteries.

NOTE: If the unit is unplugged or power is interrupted during the charging cycle, time will start over and run the full charge cycle.

Product Detail:

Designation: Easy Charger

Color: Gun Metal Gray with Removable Face Plates (pearl, black, and silver)

Charge Capability: "AA" (2) or (4)
"AAA" (2) or (4)
"AA" (2) and "AAA" (2) Simultaneously

Time to Full Charge: (approximate)	2500 mAh	"AA"	8.5 hours
	2000 mAh	"AA"	6.7 hours
	1700 mAh	"AA"	5.7 hours
	900 mAh	"AAA"	9.0 hours
	850 mAh	"AAA"	8.5 hours

Shutoff Mechanism: By timer control (8.5 hours ± 30 minutes)
Temperature detection at 55°C

Charging Current: AA @ DC 2.8V, 360mA ± 10%
AAA @ DC 2.8V, 120mA ± 10%

Trickle Charge: None

Input Rating: AC 120V ± 10%, 60Hz

Input Current: Maximum 150mA @ AC 120V/60Hz

Input Power: $\leq 6W$

Typical Weight: 166.5 grams (5.9 oz.)

Dimensions (mm): 12.9 x 13.2 x 8.6 (H x L x W)

Rev Polarity Protection: Yes

Primary Battery Detection: None



Battery Charger

Charging Instructions:

1. To charge batteries, open the battery compartment and set the battery holder to the appropriate setting (AA or AAA). Install the batteries in the chamber as indicated by the polarity symbols (= and -) marked inside. When charging only 2 batteries, use either the two left or two right chambers.
2. Lift the prongs of the AC plug until the plug snaps into place. Plug the charger into a standard AC outlet. Push the one-touch on/off button to start the charger. The red "Charging" LED will light during charging.
3. The green "Done" LED will light when batteries are finished charging. Unplug the charger from the outlet and remove the batteries from the charger.
 - For best performance, charge the batteries in an area between 59 and 77 degrees Fahrenheit (15 to 25 degrees Celsius). If the area is too warm, the batteries will not be fully charged. If the area is too cold, the batteries can permanently lose their ability to charge.
 - Orientate charger in a vertical or floor mount position.
 - It is normal for batteries to become warm while charging and is no cause for alarm.
 - Batteries self-discharge (lose their charge) at the rate of 1/2 to 1% per day when not in use. For optimum performance, charge before each use. Batteries that have not been used for several months may require 2 or 3 charge cycles to reach full capacity.

Important Safety Instructions:

1. Charge only rechargeable nickel metal hydride batteries. Charging any other type of rechargeable or non-rechargeable (disposable) batteries may cause them to leak, rupture, or explode, causing injury.
2. Do not charge batteries with different capacities at the same time.
3. For indoor use only. Do not expose charger to rain, snow or excessive moisture.
4. Never use an extension cord or any attachment not recommended by Energizer. May result in a risk of fire or electric shock.
5. Do not operate the charger if it has been subjected to shock or damage. Take it to a qualified serviceman for repair.
6. Do not disassemble the charger. Incorrect reassembly may result in a risk of electric shock or fire.
7. Always unplug the charger from the outlet before attempting maintenance or cleaning.
8. Never alter the plug provided. Improper connection can result in a risk or electric shock.
9. Never use as a power source for any electrical equipment.
 - This charger is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure they do not play with the charger.
 - CAUTION:** Risk of electrical shock. Dry location use only. Batteries may become hot to touch while charging.

Important Notice

This data sheet contains information specific to products manufactured at the time of its publication.

©Energizer Holdings, Inc. - Contents herein do not constitute a warranty.