



**IMPORTANT SAFETY INSTRUCTIONS -  
SAVE THESE INSTRUCTIONS. DANGER  
- TO REDUCE THE RISK OF FIRE OR  
ELECTRIC SHOCK, CAREFULLY  
FOLLOW THESE INSTRUCTIONS.**

## Thank You for Choosing the Energizer® 1 Hour Charger

Please read this manual before you use the charger, and save it for reference.

Batteries: Nickel Metal Hydride (NiMH) Rechargeable batteries

Sizes: AA and AAA


Recommended Energizer® NiMH Batteries

### CHARGING


1. Load Batteries into Charger
  - Insert batteries to match the polarity marks (+ and -).



2. Plug in the Charger
  - Plug transformer into a standard AC outlet.

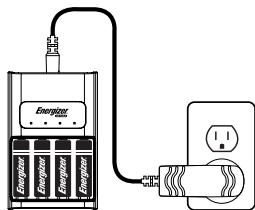

3. Charge

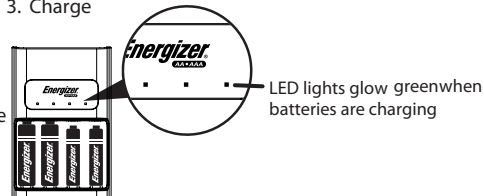

Note: If green LED light blinks rapidly, then a bad rechargeable or disposable battery is in the charger.

- When green LED turns off charging is complete.
- Take out the batteries when done charging.

4. Store
  - Unplug the charger from the AC outlet.

### CHARGING TIMES

Battery Size (NiMH)	Rated Capacity (mAh)	Estimated Charging Time
AA	2450	60 min
AA	2000	50 min
AA	1700	42 min
AAA	850	52 min

Note: Batteries will not be damaged if left in the charger for a longer time.

### FEATURES

- Universal voltage: 100-240VAC 50/60 Hz

### SPECIFICATIONS

Model: CH1HR-2, CH1HR-2ABP

Charges: AA NiMH batteries up to 2500mAh  
AAA NiMH batteries up to 900mAh

Input Voltage: 100-240V AC

Charging Current: 2.5A for AA and 1.0A for AAA (1-4)

### WARNING

To avoid personal injury and property damage from, but not limited to, the risk of electric shock or fire:

- Charge only Nickel Metal Hydride (NiMH) rechargeable batteries. Charging other types of batteries may cause them to leak, rupture or explode.
- Do not open battery, dispose of in fire, put in backwards, mix with used or other battery types or short circuit – may ignite, explode, leak or get hot causing injury.
- Use the charger only in dry locations. Keep away from rain, snow or excessive moisture.
- This charger is intended to be in a vertical or floor mount position.
- Never plug battery chargers into an extension cord.
- Do not operate the charger if damaged.
- Do not disassemble, modify any part of the charger, or attempt to use the charger as a power source.
- Unplug before attempting maintenance or cleaning.
- For use in other countries beyond USA, attach the proper plug adapter.
- This charger is not a toy and should not be used by children or infirm persons without adequate training or supervision.

### LIFETIME LIMITED WARRANTY

Lifetime Limited Warranty: Warranty covers any defect in material or workmanship. It excludes damage caused by normal wear and tear, misuse, modification. Warranty lasts for as long as the original United States or Canadian purchaser owns this Energizer Battery Charger and these Energizer Nickel-Metal Hydride Rechargeable Batteries. Warranty terminates if you sell or transfer them. Energizer will repair or replace them at its option. Call 1-800-383-7323 for warranty service. Warranty is limited to consumer use. EXCLUDES ALL INCIDENTAL AND CONSEQUENTIAL DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH VARY BY JURISDICTION. Questions? Visit [www.energizer.com](http://www.energizer.com)  
Energizer Holdings, Inc., St. Louis, MO 63141, U.S.A.