

# Energizer

## RECHARGEABLE

IMPORTANT SAFETY INSTRUCTIONS -  
SAVE THESE INSTRUCTIONS. DANGER  
- TO REDUCE THE RISK OF FIRE OR  
ELECTRIC SHOCK, CAREFULLY  
FOLLOW THESE INSTRUCTIONS.

### Thank You for Choosing the Energizer® Compact Charger

Please read this manual before you use the charger, and save it for reference.

**Batteries:** Nickel Metal Hydride (NiMH) Rechargeable batteries

**Sizes:** AA, AAA, 9V


**Recommended:** Energizer® NiMH Batteries

### CHARGING

Charge AA or AAA batteries 1 to 4 at a time.  
Charge 9V size batteries 1 to 2 at a time.

#### 1. Load Batteries into Charger


- Insert batteries to match the polarity marks (+ and-).

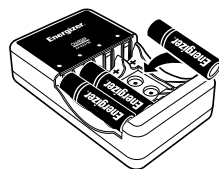

#### 2. Plug in the Charger

- Plug the charger into a standard AC outlet.

**NOTE:**  
LED lights glow green  
when batteries are charging

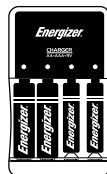

#### 3. Charge

### CHARGING TIMES

Battery Size (NiMH)	AA	AA	AA	9V
Rated Capacity (mAh)	2500	2300	2000	175
Estimated Charging Time	8.5 hr	7.7 hr	6.7 hr	7.0 hr
Type of Control	Timer Auto Cut-off	Manual		

Battery Size (NiMH)	AAA	AAA	AAA	AAA
Rated Capacity (mAh)	900	850	750	700
Estimated Charging Time	7.2 hr	6.8 hr	6.0 hr	5.6 hr
Type of Control	Manual			

### FEATURES

- Automatic timer shut-off at 8.5 hours.
- Designed with trickle charge.
- Built-in or fold-out plug depending on plug type.
- Individual LED charging indicator (Green : Charging).
- Universal voltage: 100-240V AC 50/60 Hz.
- Reverse polarity protection guards the charger and batteries from damage if batteries are placed incorrectly.

### SPECIFICATIONS

**Model:** CHCC

**Charges:** AA NiMH batteries up to 2500mAh  
AAA NiMH batteries up to 900mAh  
9V NiMH batteries up to 175mAh

**Input Voltage:** 100-240V AC 50/60Hz

**Charging Current:** 360mA for AA, 150mA for AAA, 30mA for 9V

### WARNING

To avoid personal injury and property damage from, but not limited to, the risk of electric shock or fire:

- Charge only Nickel Metal Hydride (NiMH) rechargeable batteries. Charging other types of batteries may cause them to leak, rupture or explode.
- Do not open battery, dispose of in fire, put in backwards, mix with used or other battery types or short circuit – may ignite, explode, leak or get hot causing injury.
- Use the charger only in dry locations. Keep away from rain, snow or excessive moisture.
- This charger is intended to be in a vertical or floor mount position.
- Never plug battery chargers into an extension cord.
- Do not operate the charger if damaged.
- Do not disassemble, modify any part of the charger, or attempt to use the charger as a power source.
- Unplug before attempting maintenance or cleaning.
- For use in other countries, attach the proper plug adapter.
- This charger is not a toy and should not be used by children or infirm persons without adequate training or supervision.

### LIFETIME LIMITED WARRANTY

Lifetime Limited Warranty: Warranty covers any defect in material or workmanship. It excludes damage caused by normal wear and tear, misuse, modification. Warranty lasts for as long as the original United States, Canadian or Mexican purchaser owns this Energizer Battery Charger and these Energizer Nickel-Metal Hydride Rechargeable Batteries. Warranty terminates if you sell or transfer them. Energizer will repair or replace them at its option. Call 1-800-383-7323 for warranty service. Warranty is limited to consumer use. EXCLUDES ALL INCIDENTAL AND CONSEQUENTIAL DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH VARY BY JURISDICTION.

**Questions? Visit [www.energizer.com](http://www.energizer.com)**

Energizer Holdings, Inc., St. Louis, MO 63141, U.S.A.  
UPN-122857